

尺寸:290X105mm


Body Camera user manual

Product packaging content

Host, shoulder clip, back clip (optional), data cable, charger, certificate, warranty card, manual


Getting start

1. Product components

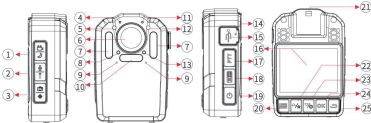

1. Video / night vision key 2. Recording / white light key 3. Photo / laser positioning key 4. Power indicator light 5. Sensory components 6. Camera 7. Infrared light 8. Blue burst flash light 9. Microphone 10. White light 11. Work indicator light 12. Laser light 13. red flash light 14. reset key 15. TYPE-C interface 16. LCD display 17. resolution switch 18. Alarm key 19. Power switch key 20. Menu key 21. Horn 22. Up / key mark 23. Down / Playback key 24. Confirm key 25. Return key

2. The indication and identification on the LCD screen

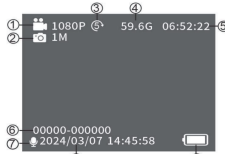


1. Video icon / video resolution 2. Photo icon / photo pixel 3. Video segmentation time 4. Remaining memory capacity 5. Remaining recording time 6. Native number-Officer number 7. Record recording icon 8. System date-time 9. Battery power icon

3. Charging equipment

Low battery display: When the battery voltage is too low, the battery level icon in the upper right corner of the display screen will turn red, and the screen will intermittently display the words "Low battery level, please charge in a timely manner" accompanied by a prompt sound. It will automatically shut down after 5 minutes. Please charge in a timely manner when low battery occurs to avoid affecting your use.

There are two ways to charge this product: ①. Connect the device to a charger for charging; ②. The charging status indicator light of the device connected to the computer is green, the power indicator light is blue, and the charging completed indicator light is off.

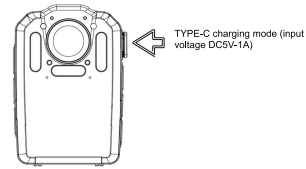

*Different models have slightly different light panels

4. Boot up

In the shutdown state, short press the [on / off] key to start the screen, and enter the preview screen, and the working state indicator is green. If no operation is not performed, the screen protection mode will automatically enter 30 seconds after startup, and the default will automatically enter the screen protection mode 30 seconds after the recording.

5. Shut down

In the boot state, long press [on / off] key to shut down, all indicator lights go off, and short press [on / off] key to enter the screensaver mode.

6. Standby

In the boot state, if no operation is carried out, it will automatically enter the screen protection mode after 30 seconds of startup, the screen is off, and the working state indicator is green. Click on any button to light up the display screen.

7. Menu Settings

In standby mode, short press the [Menu] key to enter the "Menu" setting interface. After entering the menu interface, click the [Up] or [Down] key to select the item to be set, press the [OK] key to confirm the option, use the [Up] or [Down] key to change the option. After setting is completed, press the [OK] key again to confirm, and the device will automatically save the setting changes. The detailed system options will not be repeated. The screen displays as follows:

Menu	
1/28	
Video resolution	1080P30
Photo size	1M
Continuous photo shooting	Close
Delayed recording	Close
Loop recording	Open

After selecting, click the 【 OK 】 button to confirm.

•**Infrared switching:** can be set to switch between two recording modes suitable for day or night vision. In night vision mode, the image is black and white, and the infrared light is turned on. Press the [OK] button to enter the dual color waiting to be modified state. Press the [Up] button or the [Down] button to select. There are two options: manual and automatic. The default is manual. After selecting, press the [OK] button to confirm.

•**Automatic screen shutdown:** After activation, the screen will automatically shut down within the set time, and can be reopened by pressing any button. Press the 【 OK 】 key to enter the waiting to be modified state, press the 【 Up 】 key or 【 Down 】 key to select, options related to 5, 10, 30 minutes, etc., default to 5 minutes, after making the selection, press the 【 OK 】 key to confirm.

•**Automatic shutdown:** Press the 【 OK 】 key to enter the waiting for modification state, press the 【 Up 】 key or 【 Down 】 key to select, options related to 5, 10, 30 minutes, etc., default to 5 minutes, after making the selection, press the 【 OK 】 key to confirm.

•**Volume:** Press the 【 OK 】 key to enter the waiting for modification state, press the 【 Up 】 key or 【 Down 】 key to select, options are low, medium, and high, default to medium. After making the selection, click the 【 OK 】 key to confirm.

•**Video resolution:** Click [OK] confirm key to enter the state to be modified, click [up] key or [down] key to select, the options are 4K, 1440P, 1296P, as optional configuration, subject to the actual sales), 1080P, 720P, 480P, select the required resolution and then click [OK] key to confirm.

•**Photo resolution:** Press the [OK] key to enter the state to be modified, press the [Up] key or the [Down] key to select, the options are 1M, 3M, 5M, 8M, 12M, 20M, 34M, 48M, the default is 1M, after the selection, click the "OK" key to confirm.

•**Continuous photo shooting:** press the [OK] key to enter the state to be modified, press the [Up] key or [Down] key to select, the options are: Off, 3 photos, 5 photos, 10 photos, the default is off, click the [OK] key to confirm.

•**Delay recording:** Press the [OK] key to enter the state to be modified, press the [Up] key or the [Down] key to select, the options are: Off, 5 seconds, 30 seconds, 1 minute, 5 minutes, the default is off, click the [OK] key to confirm the selection.

•**Loop recording:** When turned on, the old recording file will be automatically overwritten when the memory is insufficient. Press the [OK] key to enter the state to be modified. The options are on and off. The default is on and on.

•**Video segment:** Press the [OK] key to enter the state to be modified, press the [Up] key or [Down] key to select, you can set the length of video segment, the options are 3, 5, 10, 20, 30 minutes, the default is 5 minutes, after the selection, click the [OK] key to confirm.

•**Super storage:** After opening, the image quality is reduced, memory space is reduced, and memory storage time is increased. Click the [OK] key to enter the state to be modified. Click the [Up] key or the [Down] key to select.

•**Vehicle mode:** Click [OK] to enter the state to be modified, click [Up] or [Down] to select, there are two options: on and off, the default is off, click [OK] to confirm after the selection.

•**Close mode:** After opening, the recording has no sound prompt and no indicator light. The OK key enters the state to be modified. Tap the [Up] key or [Down] key to select the option. The option can be on or off. Click the [OK] key to confirm the selection.

•**Time-lapse recording:** The number of frames will be reduced after it is turned on. Click [OK] to enter the state to be modified. Click [Up] or [Down] to select the options: Off, 1 frame, 10 frame, 15 frame, the default is off.

•**Exposure:** Press the OK key to enter the state to be modified, press the up key or the down key to select, the options are +3, +2, +1, 0, -1, -2, -3, the default is 0, after the selection, click the [OK] key to confirm.

•**Motion detection recording:** After it is turned on, in the standby state, when there is an object moving in front of the camera, the recording will automatically start for 10 seconds. If there is no object moving within 10 seconds, the recording will stop after 10 seconds. If there is, the recording will continue until there is no object moving within 10 seconds and then the recording will be closed again. Press the [OK] key to enter the state to be modified, and press the "up" key or "Down" key to select. The options are on and off, and the default is Off.

•**Language selection:** Click [OK] to enter the state to be modified. Click [Up] or [Down] to change the options for Simplified Chinese, Traditional Chinese, and English. The default is Simplified Chinese.

•**Clock setting:** Click [OK] to modify the status, click [Up] or [Down] to change the specific content, and then click [OK] to confirm the input. Number setting: Press [OK] key to modify the status, press [Up] key or [Down] key to change the specific content, and press [OK] key to confirm the input.

•**Date label:** Click [OK] key to enter the state to be modified, click [Up] key or [down] key to select, the options are on and off, the default is on, select and press [OK] key to confirm.

•**Password protection:** Tap [OK] key to enter the password input state, the default password is 6 0, can be changed after entering the password, tap up or down, key to change the specific content, options are on and off, the default is off, click [OK] to confirm after selection.

•**Change the password:** Click [OK] to enter the password input state, the default password is 6 zeros, you can change the new password only after entering the current password, click [up] or [down] to change the specific content, and click [OK] to confirm after entering.

•**Voice broadcast:** Click [OK] to enter the state to be modified, click [Up] or [Down] to select, there are two options: on and off, the default is off, click [OK] to confirm the selection.

•**Sound recording:** After the recording and video are closed, there is no sound. Tap [OK] to enter the state to be modified. Tap [Up] or [Down] to select the option.

•**Voice control bar word:** Click [OK] to enter the view state, voice control is limited to the content of the entry, return to the standby interface, you can use voice control to open the corresponding function.

•**Default setting:** Tap [OK] to enter the state to be modified. Tap [Up] or [Down] to select Cancel and confirm. After the selection is complete, tap [OK] to confirm.

•**Format:** Click [OK] to enter the state to be modified, click [up] or [down] to cancel. Confirm the two options and click [OK] to confirm the selection. • **Firmware version:** Click [OK] to view the version number of the machine.

8. Video

8.1 Camera

In the startup state, tap in the preview screen or hold down the "Video" button for 3 seconds under the shutdown state or press the "Video" button to start recording. When recording, a red dot in the upper left corner of the screen starts to blink slowly, and the recording time is displayed in red to display the recording duration, and the working status indicator shows red and flashes.

Click the "Video" button again or one key to stop recording, the work indicator will turn green, the video file will be automatically saved to TF memory card, the screen will automatically return to the camera preview screen, and the video will be named with the date and time, AVI as the suffix, and saved in the memory card. To view the video, please refer to the "View/Playback" section.

8.2 Video Lock

During the recording process, press the "Up/Highlight" key to lock the current video, and press the "Up/Highlight" key again to unlock the video, without interrupting the recording function during this process. Locked videos will not be deleted in the circular save state.

9.Take pictures

In the startup state, click the "photo" button under the preview screen to take a photo and save it automatically. During the photo taking process, there is a sound of "click". Each button takes a photo at a time, and the photo is named after the date and time jpg suffix and saved in the memory card. To view the photo, please refer to the "View/Play back Audio and video" section.

10.Record alone

In the startup state, tap in the preview screen or hold down the "Record" button for 3 seconds to start the separate recording. When recording, the screen will display the recording identifier with flash yellow. Tap the "Record" button again to stop the separate recording, and the work indicator will turn green.

11.Infrared night vision mode


After turning on the infrared night vision function default to "manual" mode, infrared night vision light is off, filter switch is color, suitable for daytime use. To use at night, manually switch to infrared night vision mode. In the startup state, hold down the "Video/night vision" button in the preview screen to turn on the infrared mode. At this time, the infrared light will turn red, and the image will become black and white during the preview screen or shooting process Video/Night Vision key to turn off infrared mode, when the infrared light is off, preview picture or image restoration color image during the camera process, long press video/night vision key to switch between day mode and night mode. If you need to switch automatically, you can set the infrared control to "automatic" in the menu, and then the recorder can automatically switch the infrared night vision mode according to the light brightness.

12. file deletion

The audio and video files saved on the memory card cannot be deleted separately in the machine; Delete the operation of audio and video files can be connected to the computer, through the computer into the U disk operation, you can also clear the file by formatting the machine.

13. Check/play back the audio and video

a. In the standby state, press the "Playback" key to enter the review playback menu, and use the "up" key or "down" key to select the required option, as shown below:

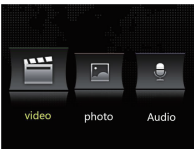

b. Press the [OK] key to access the playback list. Use the [Up] key or [Down] key to select the file to be played.

c. Click [OK] to view, and click [Back] to return to the upper menu;

14. Reset and restart

When the device crashes or stops responding to the operation due to improper operation or other special reasons, you can use the pen tip, toothpick or similar items to press the [Reset] key (do not use too much force) to reset the device. After the reset key is pressed, the device automatically shuts down, and the previous setting can be restored by restarting the device.

15. Indicator description

① In the startup state, the power indicator is steady on in the preview screen;

② In the startup state, the working status indicator in the camera mode is red and slowly blinks;

③ In the startup state and recording mode, the working status indicator is yellow and slowly blinks;

④ In the data connection state, the power indicator is blue green;

⑤ In the charging state, the power indicator is blue, and the power indicator is turned off after charging.

⑥ In the startup state, the work indicator flashes red once every photo is taken;

16. Infrared light, flash light, white light instructions

In the startup state, long press the [Video/night vision] key to turn on/off the infrared light for auxiliary lighting for night shooting. In the startup state, press the "alarm" button to turn on/off the flash light, and the machine will emit alternating red and blue flash lights and accompanied by alarm sound to provide emergency alarm function. In the startup state, long press the [Recording/white light] key to turn on/off the white light, and the machine will emit white light to play the role of lighting.

17. Laser light instructions

In the startup state, long press the [photo/laser positioning button] key to turn on/off the laser light. The machine emits a red laser beam for positioning the shooting direction.

Troubleshooting and handling

1. The device cannot be turned on and does not respond to operation

1. Please connect the charger to charge the device, and check whether the problem is solved after 4 hours of charging;

2. Please check whether the charger and connection cable are normal;

3. please press the reset button to restore the device to factory Settings, and then check whether the problem is solved;

4. if the problem can not be solved, please contact the after-sales personnel to return to the factory for maintenance.

2. The device image is red

Shut down the device and restart it.

Product warranty card, certificate of qualification

From the date of purchase, the main engine is guaranteed for one year and the packaging accessories are guaranteed for three months. A valid purchase voucher (paper or electronic voucher) and product warranty card are required to enjoy the warranty service.

Dear customer:

Hello! Thank you for your patronage.

In order to protect your rights and interests, please read the following carefully after purchasing the machine:

• From the date of purchase, the main engine is guaranteed for one year and the packaging accessories are guaranteed for three months.

• You need to provide a valid purchase voucher (paper or electronic voucher) and product warranty card to enjoy the warranty service, if not available, the warranty period is calculated based on the production date.

After the warranty, the original warranty period will be used.

• The faulty spare parts replaced during the warranty service belong to the company.

• The sender shall be solely responsible for the mailing cost of the repaired products caused by non-human factors.

• This warranty applies only to the original purchaser of the product.

• This warranty is only applicable to Chinese Mainland.

The following circumstances do not belong to the scope of free maintenance, the company can provide paid services:

• Exceed the warranty period or arbitrarily alter or tear the SN code.

• Product failure or damage caused by failure to install or use according to the requirements of the user manual.

• Disassemble and repair the machine without authorization of the company.

• Product damage caused by accidental factors or human actions, such as inappropriate input voltage, high temperature, water, mechanical damage, etc.

• Customer sent back for repair due to transportation, loading and unloading damage.

• Product damage caused by earthquake, fire, flood, lightning strike and other force majeure.

Product name		Date of purchase	
User name		Contact number	
Mailing address			
Fault description			

The Company reserves the right of final interpretation and modification of warranty contents